


Table with 10 columns for different languages: ENGLISH, GERMAN, SLOVENIAN, ITALIANO, ROMANIAN, BOSNIAN, SLOVAK, CROATIAN, POLISH, SERBIAN. Each column contains technical specifications and safety information for the Thermiq FloorHub system.

SAFETY INFORMATION AND INSTALLATION. Use in accordance with national and EU regulations. The device only as intended, keeping it in a dry condition. The product is for indoor use only. Please read the manual before installation or use. Installation must be performed by a qualified person with appropriate electrical qualifications.

WARNING! For the initial installation, there may be additional power requirements, which should be responded to by the installer.

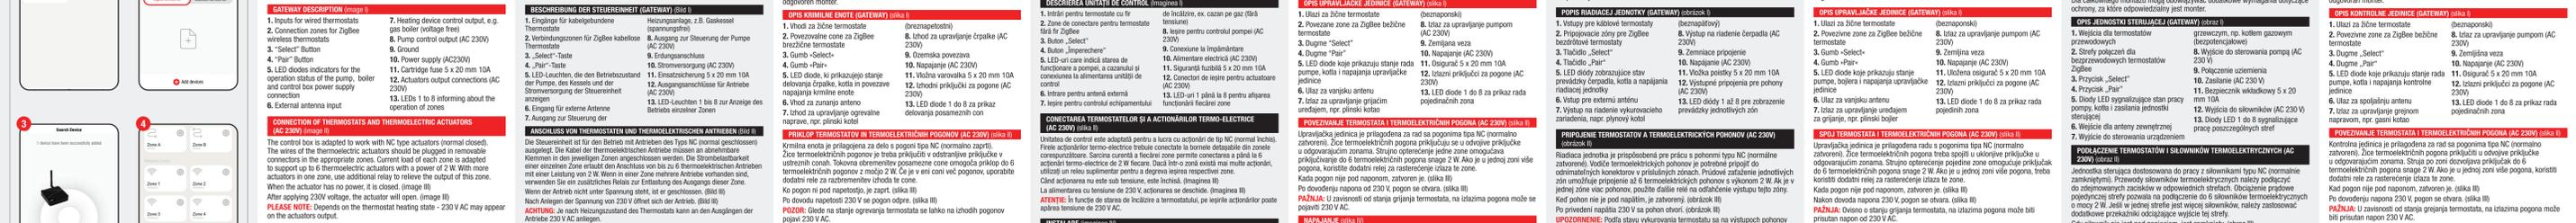

INSTALLATION (ENGLISH). 1. Remove the top cover of the control box. 2. Wires for the boiler and battery-powered thermostats. 3. Wires for 230V thermostats. 4. Power supply for the wiring center and pump.

INSTALLATION (GERMAN). 1. Entfernen Sie die obere Abdeckung der Steuerung. 2. Drähte für die Heizung und batteriebetriebene Thermostate. 3. Drähte für 230V-Thermostate. 4. Stromversorgung für die Steuerzentrale und die Pumpe.

INSTALLATION (SLOVENIAN). 1. Odstranite zgornji pokrov krmilne jedinice. 2. Žice za kotel in baterijske termostate. 3. Žice za 230V termostate. 4. Napajanje za upravljalni center in črpalno napravo.

INSTALLATION (ITALIANO). 1. Rimuovere il coperchio superiore della scatola di controllo. 2. Fili per il boiler e per i termostati a batteria. 3. Fili per i termostati da 230V. 4. Alimentazione per il centro di controllo e la pompa.

INSTALLATION (ROMANIAN). 1. Îndalcați capacul superior al cutiei de comandă. 2. Țițe pentru boiler și termostate bateriate. 3. Țițe pentru termostate de 230V. 4. Alimentare pentru unitatea de comandă și pompa.

INSTALLATION (BOSNIAN). 1. Uklonite gornji poklop upravljačke jedinice. 2. Žice za kotla i baterijske termostate. 3. Žice za 230V termostate. 4. Napajanje za upravljački centar i pumpu.

INSTALLATION (SLOVAK). 1. Odstráňte hornú krytu ovládacího boxu. 2. Žiely pre kotol a batériové termostáty. 3. Žiely pre 230V termostáty. 4. Napájanie pre ovládací stredisko a čerpadlo.

INSTALLATION (CROATIAN). 1. Uklonite poklop upravljačke jedinice. 2. Žice za kotla i baterijske termostate. 3. Žice za 230V termostate. 4. Napajanje za upravljački centar i pumpu.

INSTALLATION (POLISH). 1. Zdejmij pokrywę sterownika. 2. Żyłki do kotła i termostatów akumulatornych. 3. Żyłki do termostatów 230V. 4. Zasilanie sterownika i pompy.

INSTALLATION (SERBIAN). 1. Uklonite poklop upravljačke jedinice. 2. Žice za kotla i baterijske termostate. 3. Žice za 230V termostate. 4. Napajanje za upravljački centar i pumpu.

